




OFFICINE MARIO DORIN SINCE 1918

DORIN
INNOVATION

ESPLOSO Commerciale


COMMERCIAL EXPLODED VIEW

H11

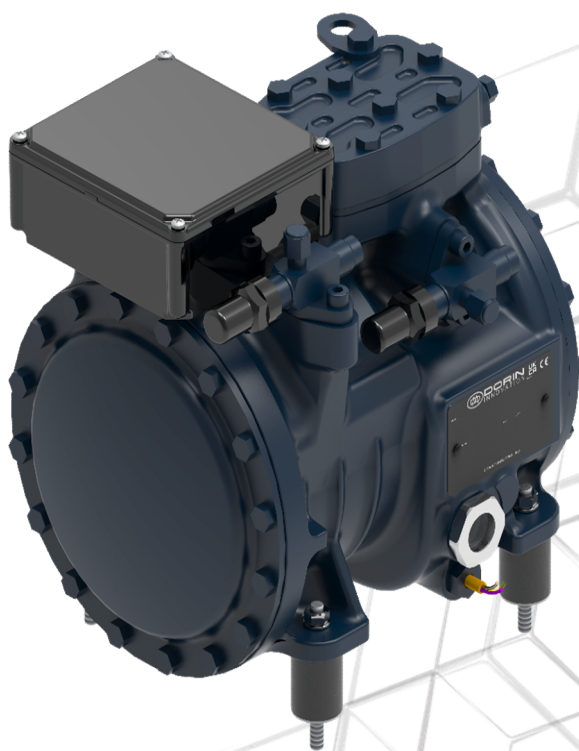

SEMI-HERMETIC MOTOR COMPRESSORS
MOTOCOMPRESSORI SEMIERMETICI

H11

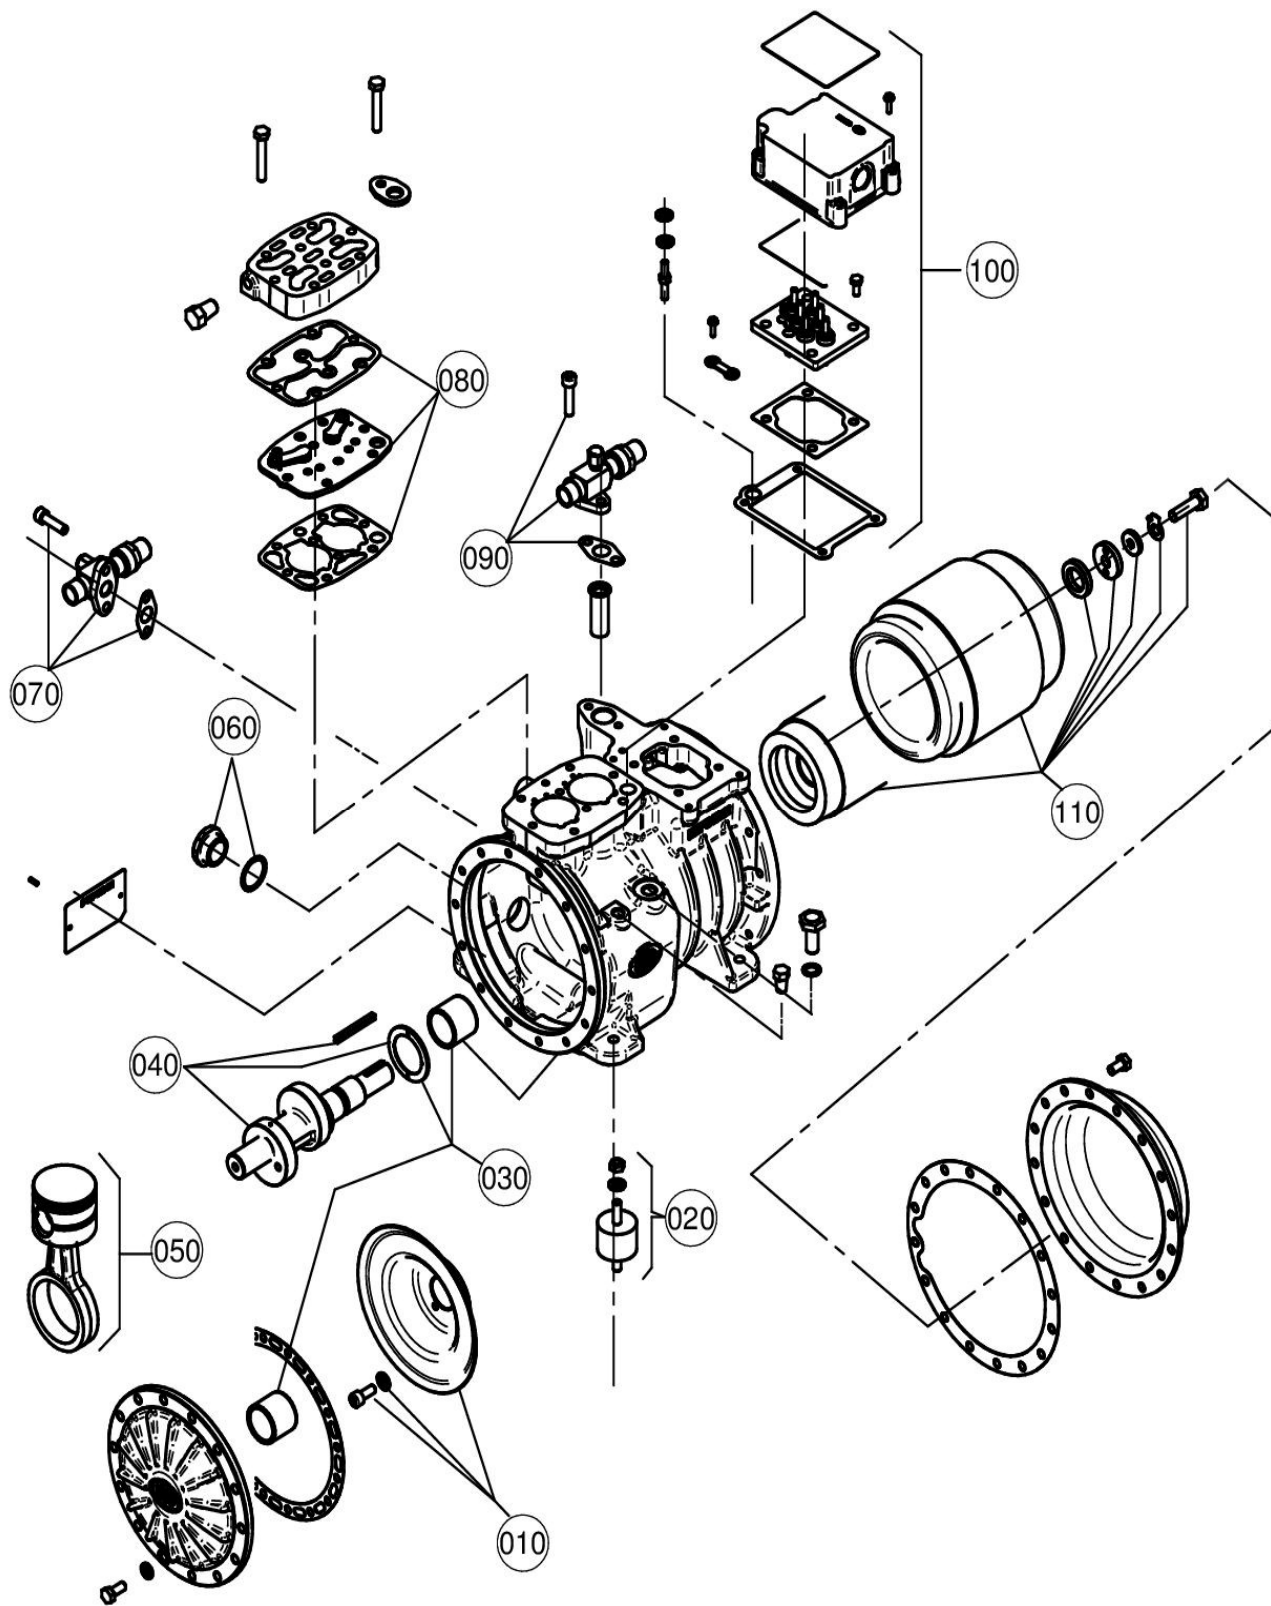

H11

Ref	H51CS	H60CC	H80CS	H101CC	H101CS	H151CC	H151CS	H181CC	H181CS	H201CC	H201CS	H221CC	H221CS	H251CC	H251CS	H281CC	H281SB	H281CS	Codice	Descrizione	Description
010	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1MKD022	Disco sbattiolio	Oil centrifugal disk
010	-	-	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1MKD023	Disco sbattiolio	Oil centrifugal disk
020	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1CC5024	Kit sospensioni compl.	Vibration damper kit compl.
030	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1CKJ012	Kit bronzine + rasamento	Bushing + thrust kit
040	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1MKA300	Albero completo c.28	Complete shaft c.28
040	-	-	1	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	1MKA301	Albero completo c.34	Complete shaft c.34
040	-	-	-	-	-	1	1	1	1	-	-	-	-	-	-	-	-	-	1MKA302	Albero completo c.38	Complete shaft c.38
040	-	-	-	-	-	-	-	-	-	1	1	-	-	-	-	-	-	-	1MKA303	Albero completo c.41	Complete shaft c.41
040	-	-	-	-	-	-	-	-	-	-	1	1	1	1	-	-	-	-	1MKA304	Albero completo c.44	Complete shaft c.44
040	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	-	1MKA305	Albero completo c.50	Complete shaft c.50
050	2	2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1MCDB89	Kit biella - pistone	Conn.rod. - piston compl.
050	-	-	2	2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1MCDB90	Kit biella - pistone	Conn.rod. - piston compl.
050	-	-	-	-	2	2	-	-	-	-	-	-	-	-	-	-	-	-	1MCDB85	Kit biella - pistone	Conn.rod. - piston compl.
050	-	-	-	-	-	2	2	-	-	-	-	-	-	-	-	-	-	-	1MCDB86	Kit biella - pistone	Conn.rod. - piston compl.
050	-	-	-	-	-	-	-	2	2	-	-	-	-	-	-	-	-	-	1MCDB91	Kit biella - pistone	Conn.rod. - piston compl.
050	-	-	-	-	-	-	-	-	2	2	-	-	-	-	-	-	-	-	1MCDB92	Kit biella - pistone	Conn.rod. - piston compl.
050	-	-	-	-	-	-	-	-	-	-	2	2	-	-	-	-	-	-	1MCDB93	Kit biella - pistone	Conn.rod. - piston compl.
050	-	-	-	-	-	-	-	-	-	-	-	-	2	2	-	-	-	-	1MCDB94	Kit biella - pistone	Conn.rod. - piston compl.
050	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	2	2	-	1MCDA09	Kit biella - pistone	Conn.rod. - piston compl.
060	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1CCQ501	Spia olio completa	Oil sight glass
070	1	1	1	1	1	1	1	1	1	1	-	-	-	-	-	-	-	-	1RKA024	Rubinetto di mandata	Discharge service valve
070	-	-	-	-	-	-	-	-	-	1	1	1	1	1	1	1	1	1	1RKA025	Rubinetto di mandata	Discharge service valve
080	1	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1PKP010	Piastra valvole	Complete valve plate
080	-	-	-	-	1	1	1	1	-	-	-	-	-	-	-	-	-	-	1PKP011	Piastra valvole	Complete valve plate
080	-	-	-	-	-	-	-	1	1	1	1	1	1	-	-	-	-	-	1PCB097	Piastra valvole	Complete valve plate
080	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	-	1PCB098	Piastra valvole	Complete valve plate
090	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1RKA024	Rubinetto aspirazione	Suction service valve
090	-	-	1	1	1	1	1	1	1	1	-	-	-	-	-	-	-	-	1RKA025	Rubinetto aspirazione	Suction service valve
090	-	-	-	-	-	-	-	-	-	1	1	1	1	1	1	1	1	1	1RKA020	Rubinetto aspirazione	Suction service valve
100	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1RKJ006*	Scatola att.el.+piastra TK	Electrical plate and box TK
100	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1RKJ068*	Scatola att.el.+piastra TE	Electrical plate and box TE
110	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1RKKT001*	Roto-statore 0,5HP-220/380/3/50Hz TK	Stator-rotor 0,5HP-220/380/3/50Hz TK
110	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1RKKE001*	Roto-statore 0,5HP-220/380/3/50Hz TE	Stator-rotor 0,5HP-220/380/3/50Hz TE
110	-	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1RKKT010*	Roto-statore 0,75HP-220/380/3/50 TK	Stator-rotor 0,75HP-220/380/3/50Hz TK
110	-	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1RKKE010*	Roto-statore 0,75HP-220/380/3/50Hz TE	Stator-rotor 0,75HP-220/380/3/50Hz TE
110	-	-	-	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1RKKT002*	Roto-statore 1,0HP-220/380/3/50 TK	Stator-rotor 1,0HP-220/380/3/50Hz TK
110	-	-	-	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1RKKE002*	Roto-statore 1,0HP-220/380/3/50Hz TE	Stator-rotor 1,0HP-220/380/3/50Hz TE
110	-	-	-	-	1	1	-	-	-	-	-	-	-	-	-	-	-	-	1RKKT003*	Roto-statore 1,5HP-220/380/3/50 TK	Stator-rotor 1,5HP-220/380/3/50Hz TK
110	-	-	-	-	1	1	-	-	-	-	-	-	-	-	-	-	-	-	1RKKE003*	Roto-statore 1,5HP-220/380/3/50Hz TE	Stator-rotor 1,5HP-220/380/3/50Hz TE

* Per questo articolo fornire il codice di matricola /
For this item, please provide the serial number.

H11

Ref	H51CS	H80CC	H80CS	H101CC	H101CS	H151CC	H151CS	H181CC	H181CS	H201CC	H201CS	H221CC	H221CS	H251CC	H251CS	H281CC	H281SB	H281CS	Codice	Descrizione	Description
110	-	-	-	-	-	-	1	1	-	1	-	-	-	-	-	-	-	-	1RKKT005*	Roto-statore 1,8HP-220/380/3/50 TK	Stator-rotor 1,8HP-220/380/3/50Hz TK
110	-	-	-	-	-	-	1	1	-	1	-	-	-	-	-	-	-	-	1RKKT005*	Roto-statore 1,8HP-220/380/3/50Hz TE	Stator-rotor 1,8HP-220/380/3/50Hz TE
110	-	-	-	-	-	-	-	-	1	-	1	1	-	1	-	1	-	-	1RKKT007*	Roto-statore 3,0HP-220/380/3/50 TK	Stator-rotor 3,0HP-220/380/3/50Hz TK
110	-	-	-	-	-	-	-	-	1	-	1	1	-	1	-	1	-	-	1RKKT007*	Roto-statore 3,0HP-220/380/3/50Hz TE	Stator-rotor 3,0HP-220/380/3/50Hz TE
110	-	-	-	-	-	-	-	-	-	-	-	-	1	-	1	-	1	-	1RKKT009*	Roto-statore 3,5HP-220/380/3/50 TK	Stator-rotor 3,5HP-220/380/3/50Hz TK
110	-	-	-	-	-	-	-	-	-	-	-	-	1	-	1	-	1	-	1RKKT009*	Roto-statore 3,5HP-220/380/3/50Hz TE	Stator-rotor 3,5HP-220/380/3/50Hz TE
110	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1RKKT060*	Roto-statore 0,6HP-220/380/3/50Hz TE	Stator-rotor 0,6HP-220/380/3/50Hz TE
110	-	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1RKKT076*	Roto-statore 0,9HP-220/380/3/60 TK	Stator-rotor 0,9HP-220/380/3/60Hz TK
110	-	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1RKKT076*	Roto-statore 0,9HP-220/380/3/60Hz TE	Stator-rotor 0,9HP-220/380/3/60Hz TE
110	-	-	-	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1RKKT077*	Roto-statore 1,2HP-220/380/3/60 TK	Stator-rotor 1,2HP-220/380/3/60Hz TK
110	-	-	-	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	1RKKT077*	Roto-statore 1,2HP-220/380/3/60Hz TE	Stator-rotor 1,2HP-220/380/3/60Hz TE
110	-	-	-	-	-	1	1	-	-	-	-	-	-	-	-	-	-	-	1RKKT079*	Roto-statore 1,8HP-220/380/3/60 TK	Stator-rotor 1,8HP-220/380/3/60Hz TK
110	-	-	-	-	-	1	1	-	-	-	-	-	-	-	-	-	-	-	1RKKT079*	Roto-statore 1,8HP-220/380/3/60Hz TE	Stator-rotor 1,8HP-220/380/3/60Hz TE
110	-	-	-	-	-	-	1	1	-	1	-	-	-	-	-	-	-	-	1RKKT081*	Roto-statore 2,1HP-220/380/3/60 TK	Stator-rotor 2,1HP-220/380/3/60Hz TK
110	-	-	-	-	-	-	1	1	-	1	-	-	-	-	-	-	-	-	1RKKT081*	Roto-statore 2,1HP-220/380/3/60Hz TE	Stator-rotor 2,1HP-220/380/3/60Hz TE
110	-	-	-	-	-	-	-	-	1	-	1	1	-	1	-	1	-	-	1RKKT083*	Roto-statore 3,6HP-220/380/3/60 TK	Stator-rotor 3,6HP-220/380/3/60Hz TK
110	-	-	-	-	-	-	-	-	1	-	1	1	-	1	-	1	-	-	1RKKT083*	Roto-statore 3,6HP-220/380/3/60Hz TE	Stator-rotor 3,6HP-220/380/3/60Hz TE
110	-	-	-	-	-	-	-	-	-	-	-	-	1	-	1	-	1	-	1RKKT085*	Roto-statore 4,2HP-220/380/3/60 TK	Stator-rotor 4,2HP-220/380/3/60Hz TK
110	-	-	-	-	-	-	-	-	-	-	-	-	1	-	1	-	1	-	1RKKT085*	Roto-statore 4,2HP-220/380/3/60Hz TE	Stator-rotor 4,2HP-220/380/3/60Hz TE

Accessori

	1	1	1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1CCM160	Serie completa guarnizioni	Complete gasket set
	-	-	-	-	1	1	1	1	-	-	-	-	-	-	-	-	-	-	1CCM161	Serie completa guarnizioni	Complete gasket set
	-	-	-	-	-	-	-	1	1	1	1	1	1	-	-	-	-	-	1CCM162	Serie completa guarnizioni	Complete gasket set
	-	-	-	-	-	-	-	-	-	-	-	-	-	1	1	1	1	-	1CCM163	Serie completa guarnizioni	Complete gasket set
	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1CCT024	Testa raffreddata ad acqua	Water-cooled head
	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1ACS827	Ventilatore ausiliario	Auxiliary head fan
	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	2EG2020	Resistenza carter 220V	Crankcase heater 220V
	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	2EG1050	Resistenza carter 110V	Crankcase heater 110V
	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	2EG1080	Resistenza carter 24V	Crankcase heater 24V
	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	2CC3110	Modulo per termistori	Thermistors module

* Per questo articolo fornire il codice di matricola /
For this item, please provide the serial number.

H11-NOTE



OFFICINE MARIO DORIN S.p.A.

Via Aretina 388, 50061 Compiobbi - Florence, Italy

Tel. +39 055 62321 1 - Fax +39 055 62321 380

dorin@dorin.com
www.dorin.com



DORIN WEB SOFTWARE

Open the camera app on your device and point it at the QR code to scan it. Make sure that all the four corners of the QR code are in view. A pop-up notification will appear on your screen, tap the notifications to launch the code.

Open the camera app on your device and point it at the QR code to scan it. Make sure that all the four corners of the QR code are in view. A pop-up notification will appear on your screen, tap the notifications to launch the code.

/ Open the camera app on your device and point it at the QR code to scan it. Make sure that all the four corners of the QR code are in view. A pop-up notification will appear on your screen, tap the notifications to launch the code. / Open the camera app on your device and point it at the QR code to scan it. Make sure that all the four corners of the QR code are in view. A pop-up notification will appear on your screen, tap the notifications to launch the code.